




BAND-IT[®]
THE CLAMPING EXPERTS

Lubricating Instructions For BAND-IT Ultra-Lok Tool

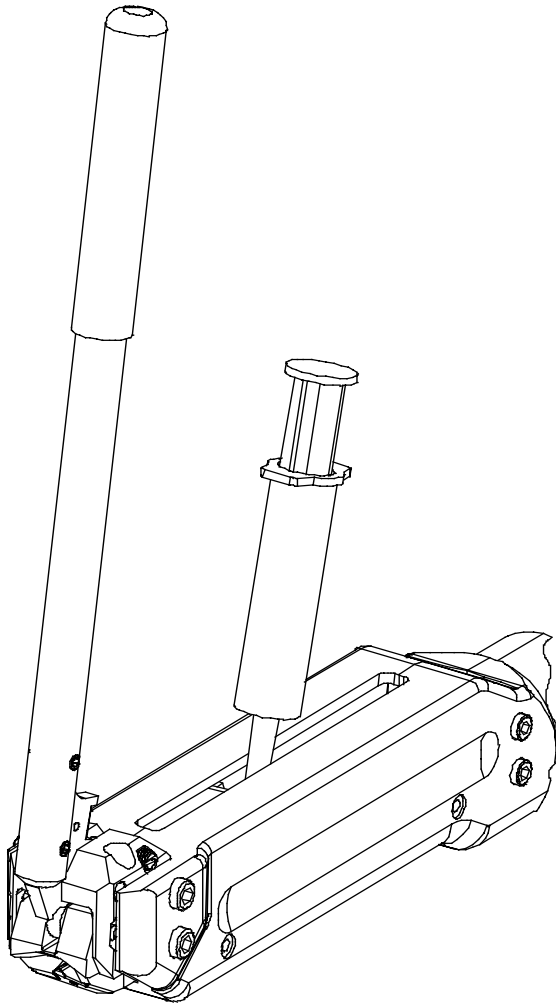

1. Make sure tension block is all the way forward. Remove cap from syringe and insert tip of syringe into slot or viewing holes on top of tool body. Press the tip against the tension screw just behind the tension block and squeeze out approximately $\frac{1}{2}$ " long bead of lubricant. Remove syringe and actuate tool without a clamp a couple of times to spread lubricant evenly on tension screw.

To order more lubricant, specify BAND-IT #C23199

A Unit of IDEX Corp

P.O. Box 16307
Denver, Colorado 80216-0307 USA
1-188-525-0758
info@band-it-idex.com
www.band-it-idex.com